




• Location of all hardware on exact centerline of forward side of mast.

- A. Spinnaker Boom track and side
- B. Topping lift block with eyestrapped
- C. Spinnaker Halyard swivel block and shackle
- D. Forward cleat which added with Spinnaker assembly is used for securing the spinnaker halyard. The port side cleat, which this already used for the jib halyard is used to secure topping lift line.

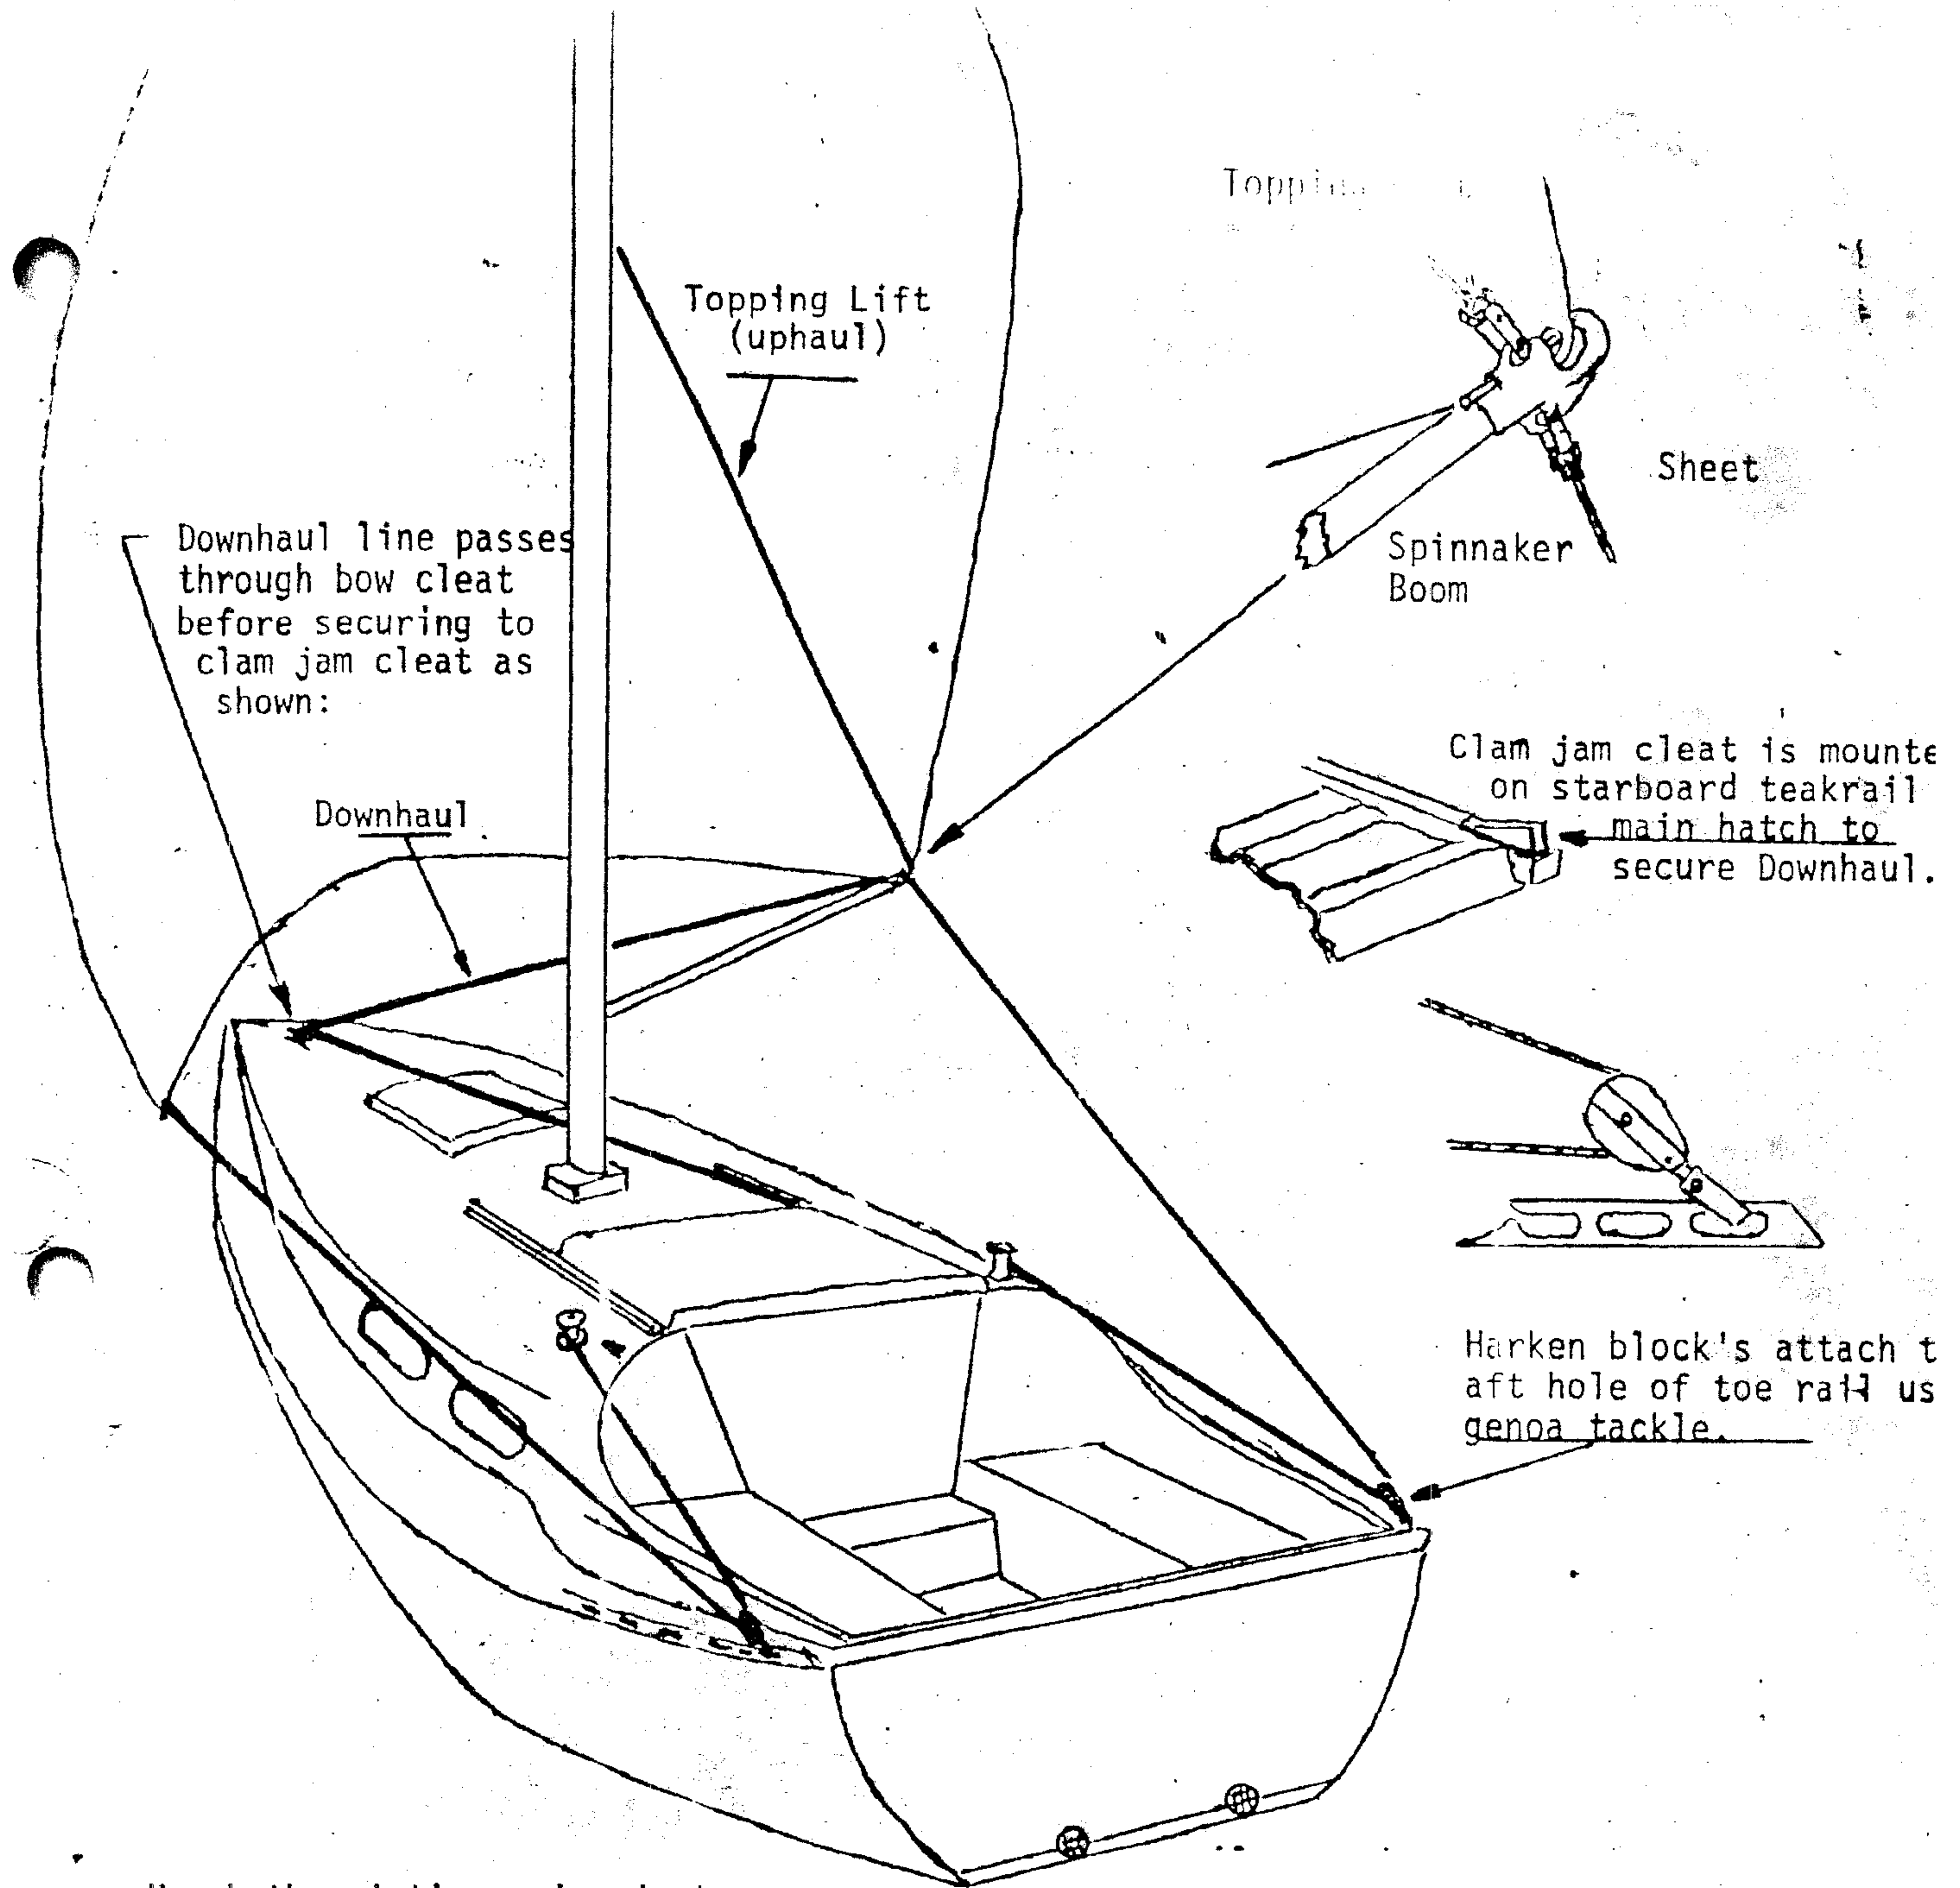


Use both existing main winches and clam jam cleats for securing spinnaker sheets.

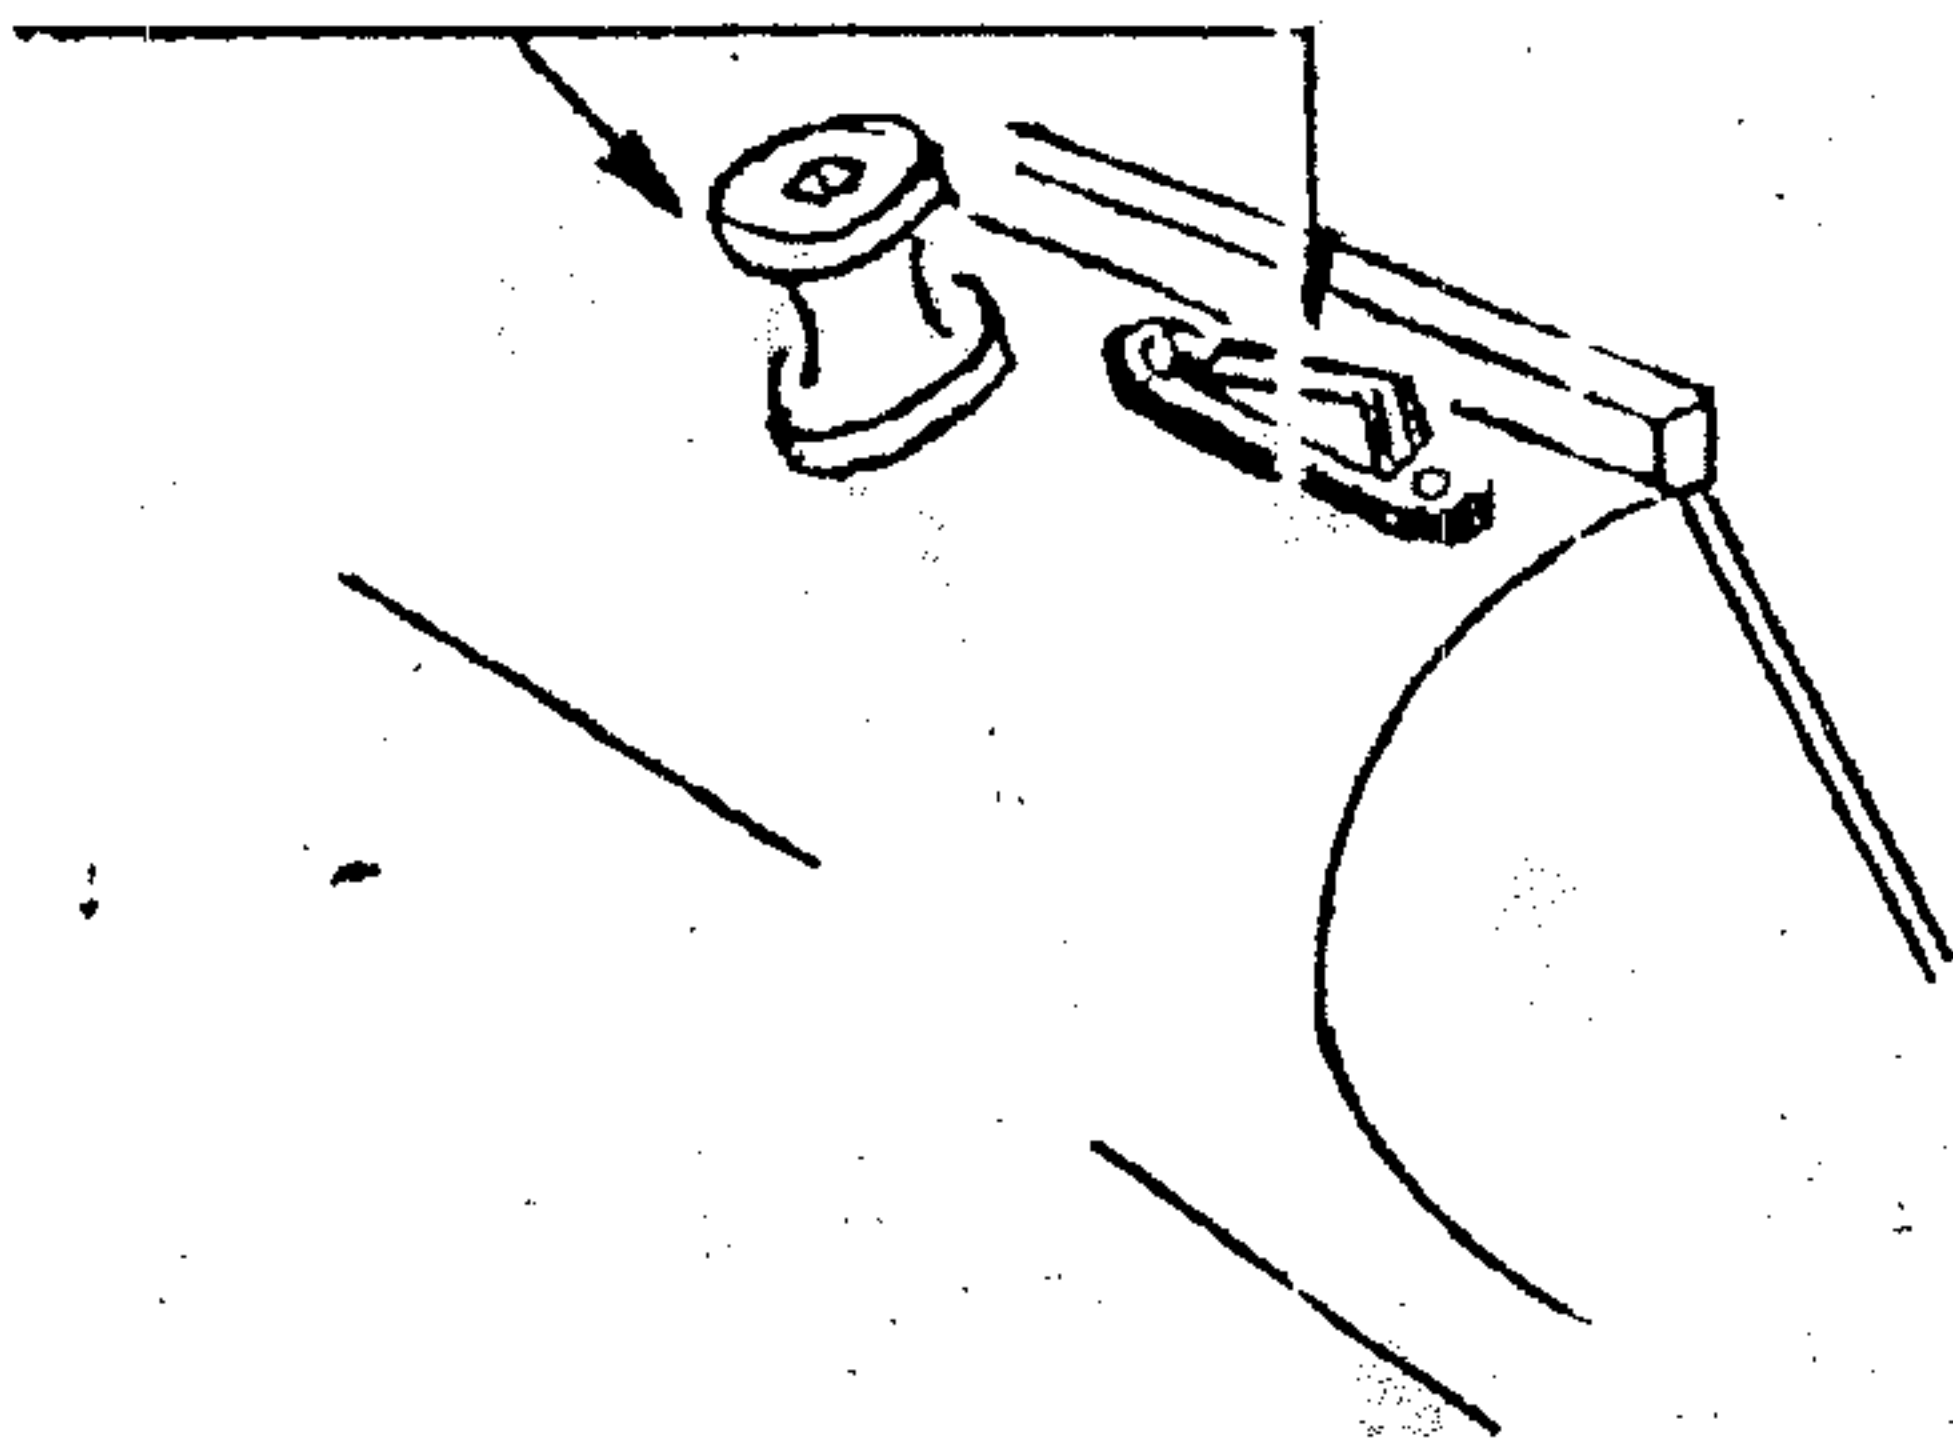


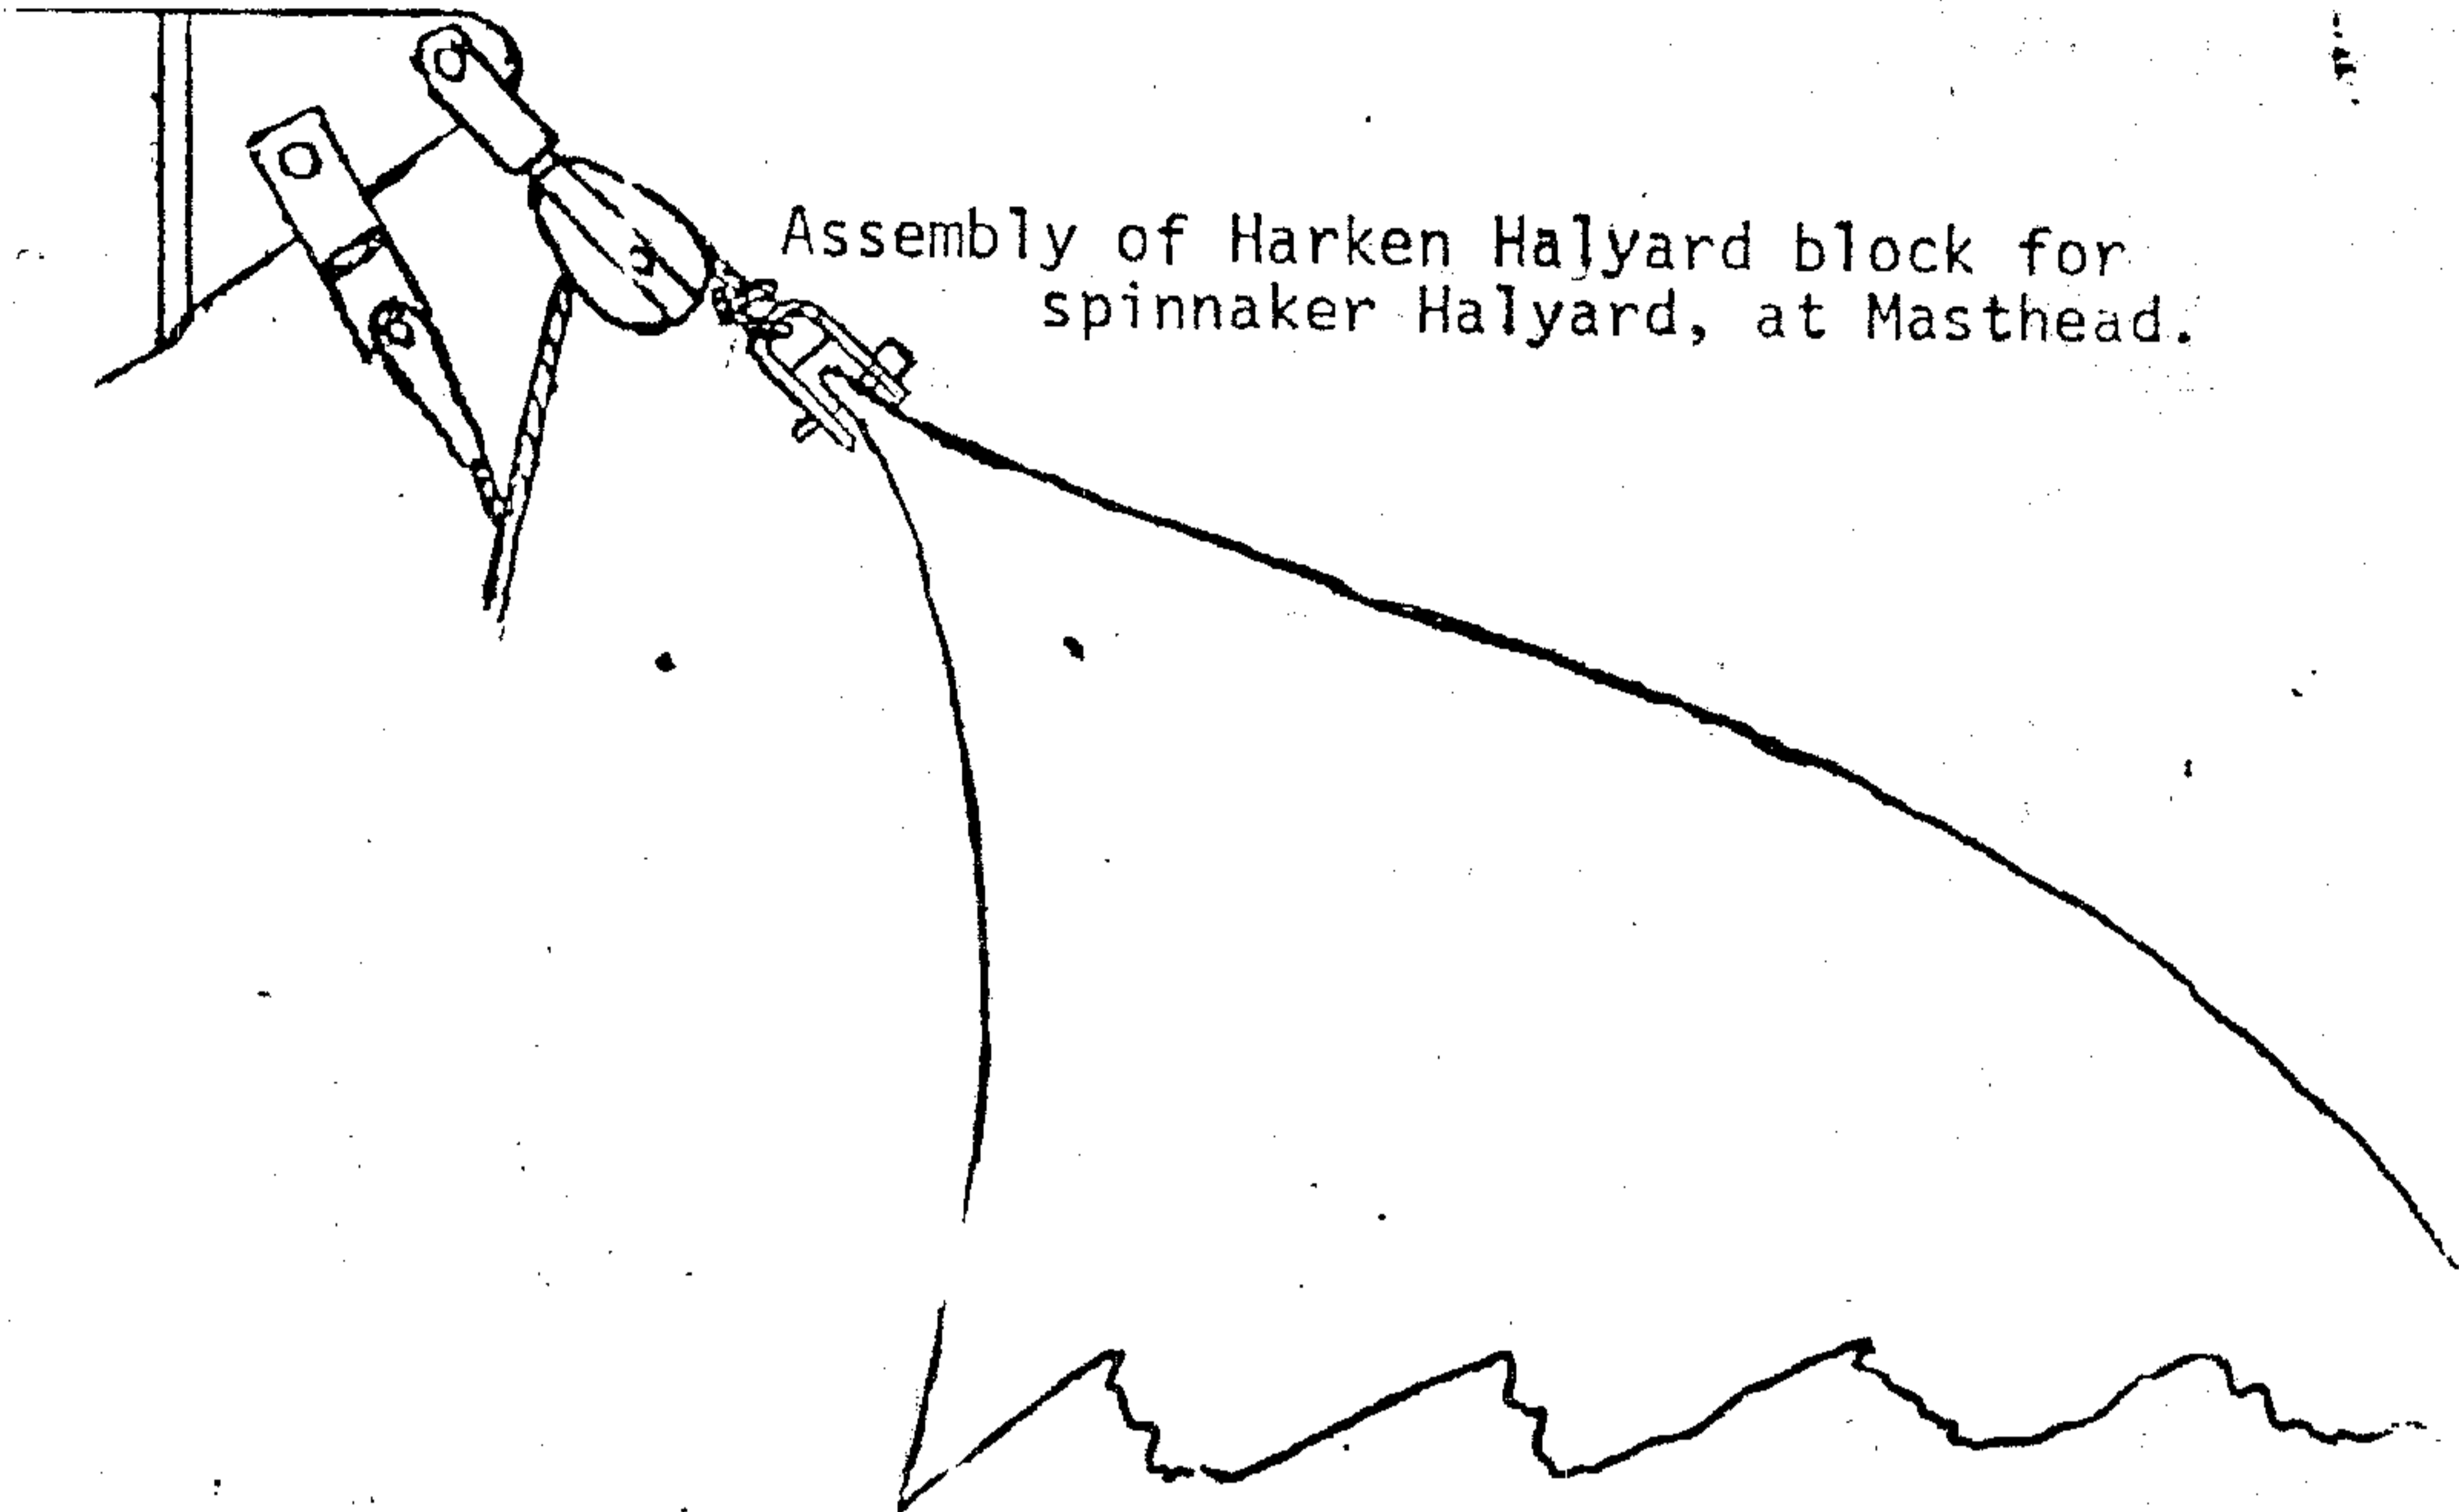

Assembly of Harken Halyard block for spinnaker Halyard, at Masthead.

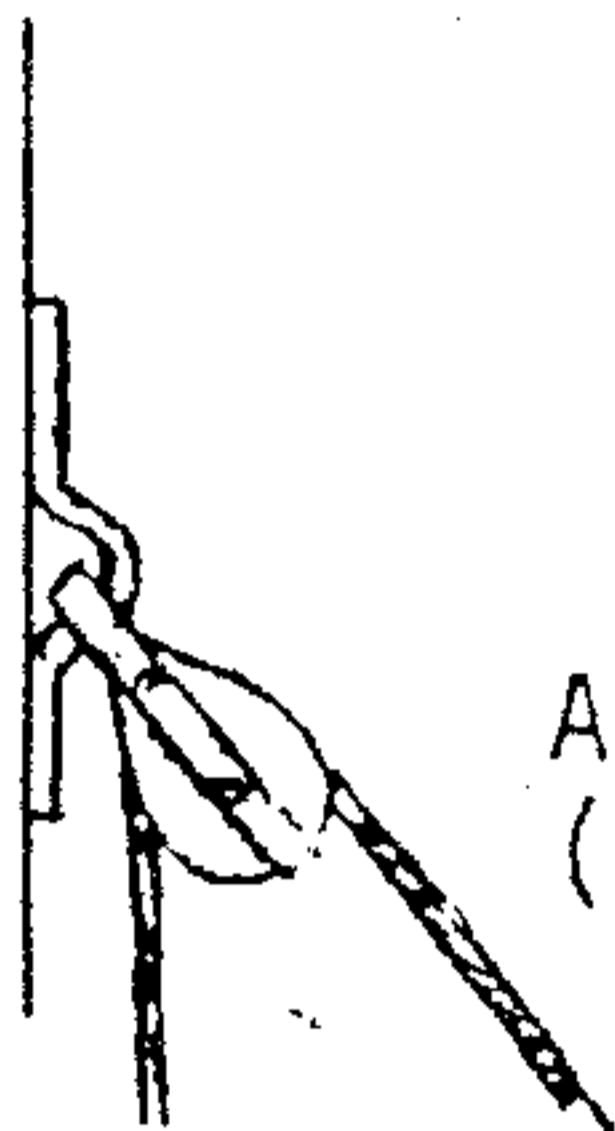

Assemble of topping lift line (uphaul) to topping lift block.

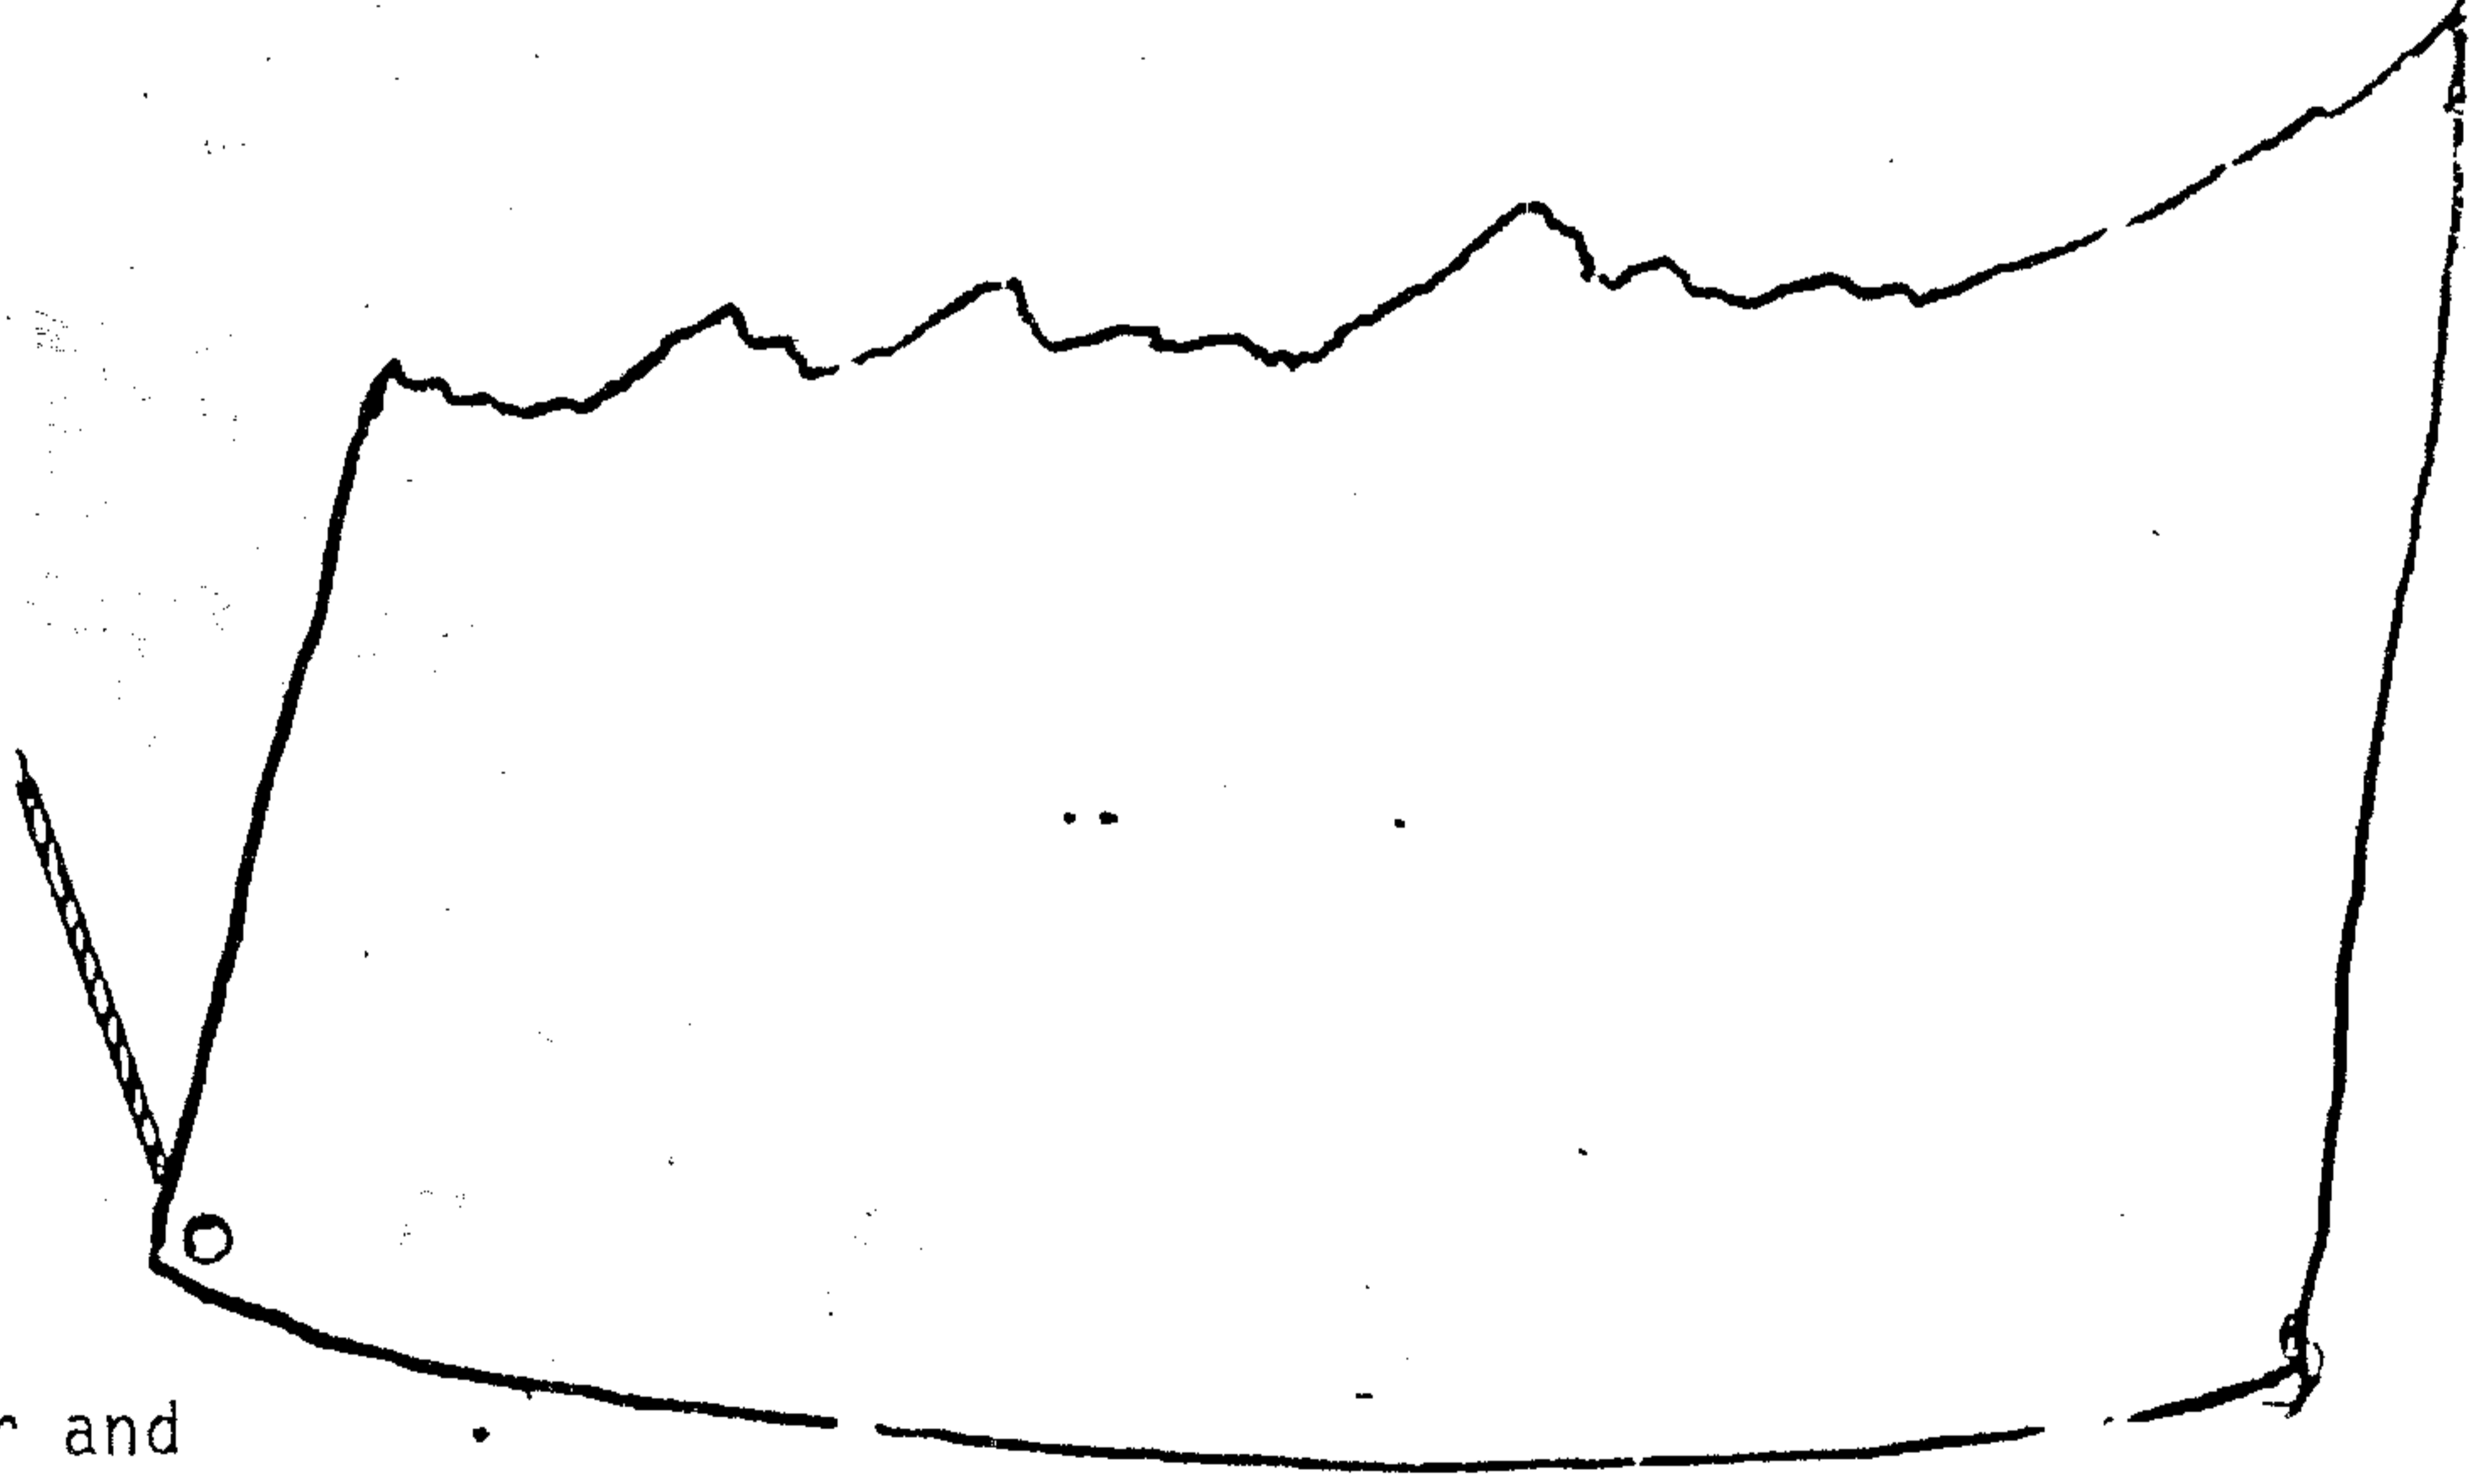

Attachment of topping lift line to spinnaker and spinnaker boom.